


WHEN YOU WANT TO MOUNT STONE IMPACT FOIL:




1. Clean the surface where the vinyl will be mounted.
REMEMBER the surface must be completely clean and dry.
YOU CAN CLEAN WITH RUBBING ALCOHOL OR SOAP WATER.
NOTE! On new cars that have been polished or prepared, it may be necessary to clean and disinfect 3-4 times in order for the surface to be completely free of polish.


2. We recommend that you place the knifeless tape where you want it before mounting so that you do not scratch the paintwork.

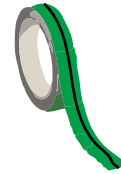


3. Then the entire back paper is pulled off the vinyl, then it is mounted on the sharpest edge.
4. Now scrape **HARD** from the sharpest edge out to mount the vinyl without bubbles.
5. We recommend that you place the vinyl about 1cm below the edge, where the vinyl lies down at the end, as point 4.
6. Then the small string in the knifeless tape is torn, and that way you can cut through the foil without scratching the varnish.

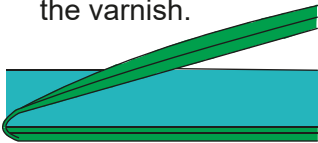


1. Fold the tape over itself!

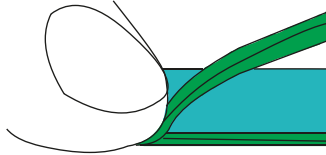

2. Press your thumb down the fold so that you cover at least one cm with your thumb.

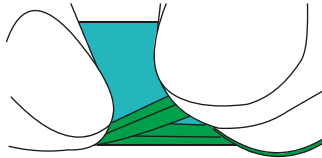

3. Grasp the tape firmly with your thumb and forefinger and make sure your thumbs are placed tightly.

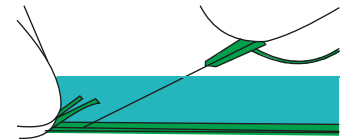

4. To loosen the thread, pull it hard and tear the thread horizontally towards the opposite end – **NOT** vertically or upwards.

7. The edges are pressed with the scraper and finally you give it a little warmth, with a heat gun, to make the edges adhere properly.