

BODYFENCE



MOUNTING FLUID RECIPE
Water - 1/2 liter of water,
Dishwashing liquid - 1/2 tsp.


For large pieces of vinyl,
it can be an advantage to be 2 people




1. IMPORTANT!!

Clean the surface before installation.

(It is very important to clean the surface before MOUNTING, dust, dirt or any contamination. Grease residues can prevent the foil from adhering properly to the place, the surface can be cleaned with soap and water.)

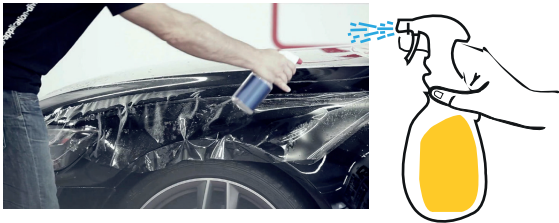


3. Spray mounting liquid on the adhesive side of the bodyfence.

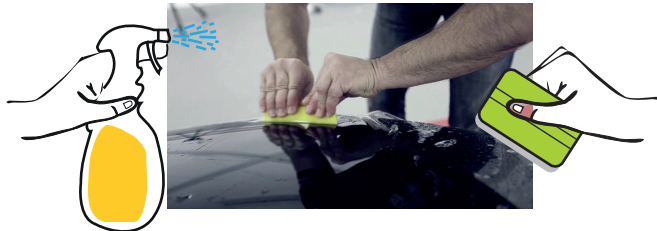

5. Spray the mounting liquid onto the surface to ensure that the scraper slides easily and hold the scraper at 45 degrees and scrape the film firmly on.



7. After cutting, scrape along the edge with your scraper.

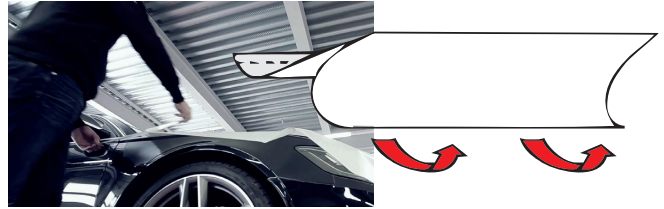

2. Now remove back paper,

Note: on some films, the back paper is transparent.



4. Place the film with the adhesive side against the mounting and the surface of the car where you want to mount the bodyfence. It is an advantage to heat up the vinyl a little, due to the curves of the car.



6. For cutting along the desired line, we recommend that you mount the knifeless Tape along the desired curve before mounting the bodyfence vinyl – If this is not the case and you want to use knife for carving, be aware that you have a new knife blade in it and beware that your pressure on the the knife is not too hard.

END,
Congratulations on your result.

IMPORTANT: WE RECOMMEND THAT YOU wait to clean and wash NO EARLIER THAN 72 HOURS AFTER Mounting.